

Пульт дистанционного управления универсальный

ДУ-25 У

TYPE: **RM-D637**

 **SONY**



Описание:

Пульт заменяет следующие виды пультов:

RM-656A; RM-677; RM-977C; RM-681; RM-687; RM-687C; RM-768; RM-791;
RM-816; RM-817; RM-821; RM-826; RM-827C; RM-830; RM-831; RM-832;
RM-833; RM-837; RM-838; RM-842; RM-827C; RM-827S; RM-827T; RM-831;
RM-834; RM-836; RM-839; RM-841; RM-845P; RM-845S; RM-849S; RM-849T;
RM-952; RM-857; RM-857A; RM-858; RM-859; RM-861; RM-862; RM-869;
RM-870; RM-871; RM-873; RM-878; RM-887; RM-881; RM-883; RM-889; RM-
890; RM-891; RM-892; RM-893; RM-916; RM-921; RM-933; RM-936; RM-938;
RM-940; RM-943; RM-945; RM-946; RM-953; RM-954; RM-955; RM-956; RM-
961; RM-963; RM-969; RM-972; RM-991; RM-992; RM-993; RM-W101; RM-
W103; RM-W104; RM-Y101; RM-Y116; RM-Y145; RM-Y145A; RM-Y146A; RM-
172; RM-Y173; RM-Y183; RM-GA002; RM-2092